

Premier Expansion Modules

A complete range of expansion modules allows modular system design, ensuring maximum flexibility and future-proof installations.

PREMIER 4XP

Remote Zone Expander for use with the Premier Series. Provides an additional 4 programmable DP or EOL zones & 2 programmable outputs. Module replaces two keypads for additional zone expansion.



Remote Zone Expander for use with the Premier Series. Provides an additional 8 programmable DP or EOL zones, 8 programmable outputs, 1 auxiliary input & a speaker driver output with programmable volume control.



Remote Zone Expander for use with the Premier International Series. Provides an additional 8 programmable EOL zones, 2 programmable outputs & a speaker driver output with programmable volume control.



Local plug-on Zone Expander for use with the Premier International Series & Premier 24 control panel. Provides an additional 8 programmable EOL zones.

PREMIER OP16

Remote Output expander for use with the Premier Series of control panels. Provides an additional 16 programmable outputs, each rated at 100mA negative applied.

PREMIER RM8

Relay Module for use with the Premier Series & Premier International Series of control panels. Provides 8 additional relay switch options.

PREMIER 60iXD

Expansion module providing two iD loops each supporting 30 iD biscuits. Includes fused 12V output for powering detectors plus engineer's keypad port for local iD diagnostics.



Premier 4XP



Premier 4XP



Premier 8X



Premier 8XE



OP16



RM8



60iXD





